
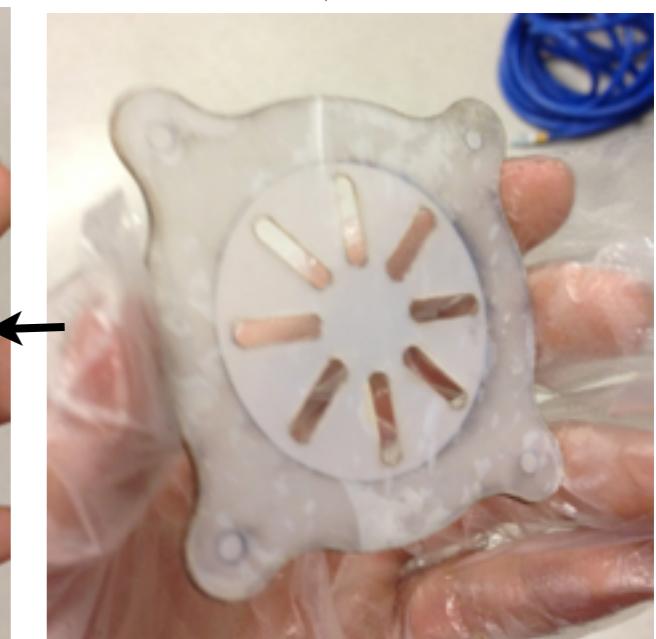
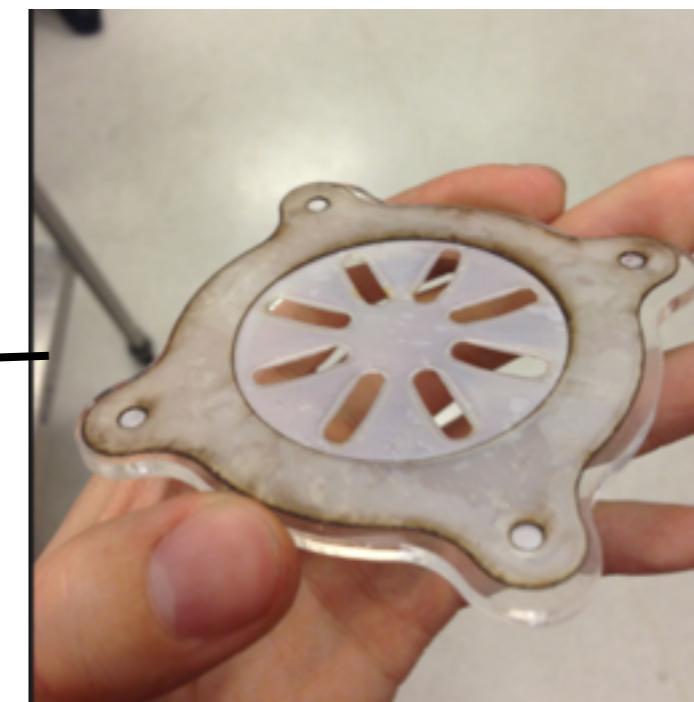
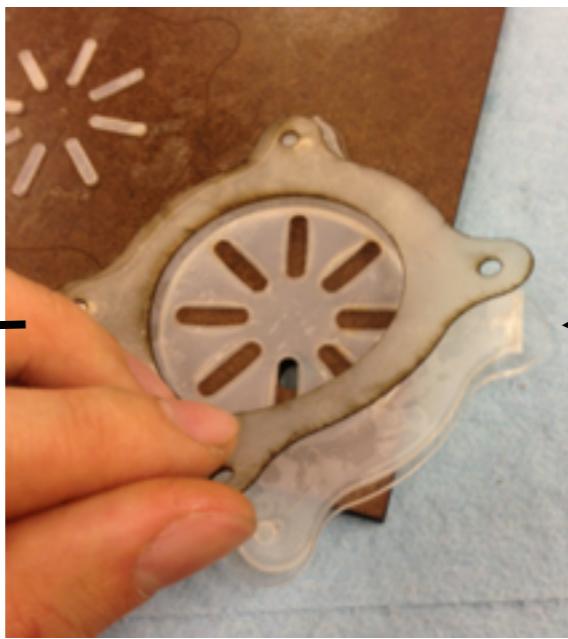


Attach the stretched acrylic film
with PTFE sheet on both sides
without glue

Cut it off

Laser cut

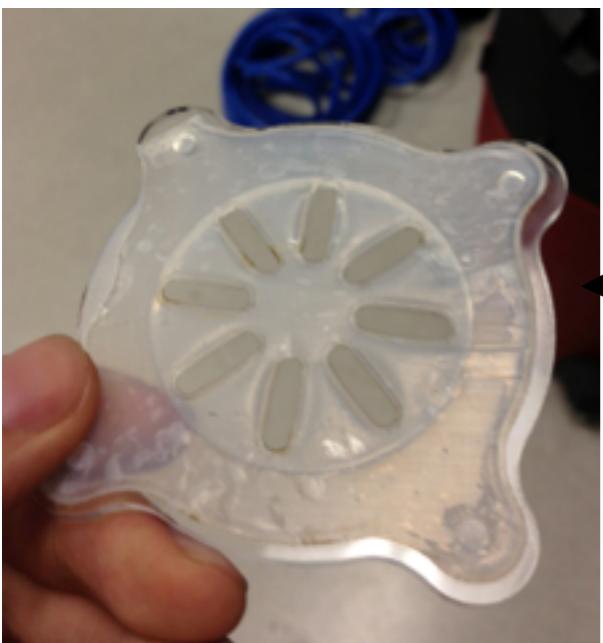

Cover with the
other frame

Peel off the transferring
frame and the other
PTFE sheet

Peel off one PTFE sheet
and attach the bare side
on acrylic frame without
glue

Glue on fiberglass
transferring frame